

# Dimond TrimSaw 2 Training SOP

Last edited: Furst (10/30/20)

Instructor:

Date:

Attendees:

|   | Name | Group or Company | Signature |
|---|------|------------------|-----------|
| 1 |      |                  |           |
| 2 |      |                  |           |
| 3 |      |                  |           |
| 4 |      |                  |           |
| 5 |      |                  |           |
| 6 |      |                  |           |

## Overview:

- This training provides an introduction to using and operating the TrimSaw 2 diamond cutting saw including:
  - Blade Types
    - Metal cutting blades
    - Glass cutting blades
  - Fixtures
  - Safety
    - PPE for saw
    - Hazards
  - Saw use
  - Saw Maintenance
    - Coolant tank cleaning/refill
    - Blade Replacement
- The Trimsaw 2 uses 6 inch diamond blades to make fine cuts in metals, glass, ceramics and PCBs. Specific blades for each material are available and should be changed before cutting new material. A variety of fixtures and guides are available with custom fixtures available for specific jobs (contact Dave Bothman or a Workshop Wizard for custom tooling). Spinning up to 3000 RPM the bottom of the blade is submerged in coolant to lubricate and cool the blade while in the cut. A blade splash guard and plexiglass cover reduce the amount of lubricant thrown by the blade.

## Safety




- Eye protection should be worn at all times while operating the saw
- All guards and shields should be in place before turning the saw on
- Hands should be kept free and out of the way of the blade at all times

- Nitral (NOT RUBBER OR CLOTH) gloves should be worn when cutting specific composites including carbon fiber and fiberglass

## Job Setup

### Switching Blades

- Remove the table to expose the reservoir and the saw blade arbor
- Insert the two pins into the saw arbor and blade retaining nut normal to the surface of the arbor

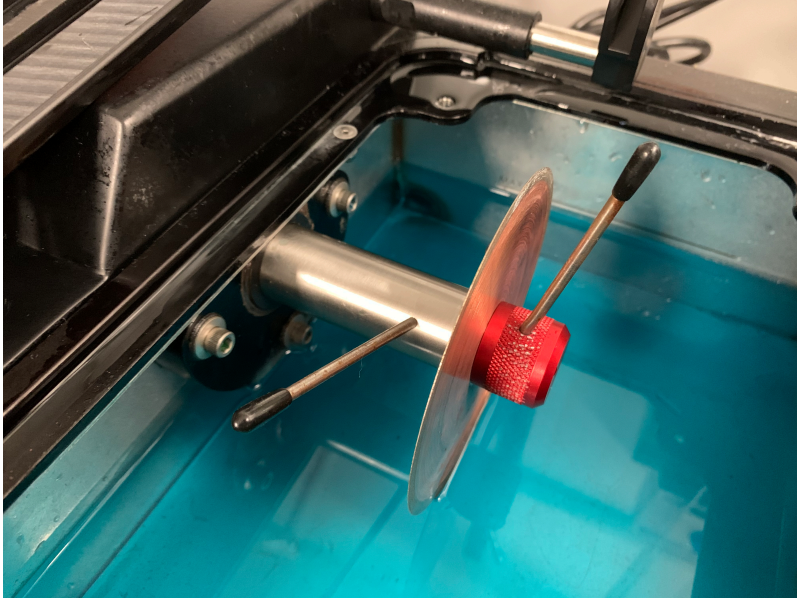


- Using the leverage on the pins, loosen the blade retaining nut to free the blade
- Carefully remove the blade from its arbor and replace with the blade matching the material you intend to cut (blades should be inspected for wear and cracks, damaged blades should be disposed of in the broken glass box)
- Lightly LUBRICATE the threads on the end of the blade arbor with a grease to prevent thread galling.
- Tighten the blade retaining nut HAND TIGHT (no need to go crazy on this one down)
- Insure the coolant level is in contact with the bottom of the blade and filled to the fill line
- Replace the table


### Part Fixturing

Several fixtures are available:


- Miter Guide

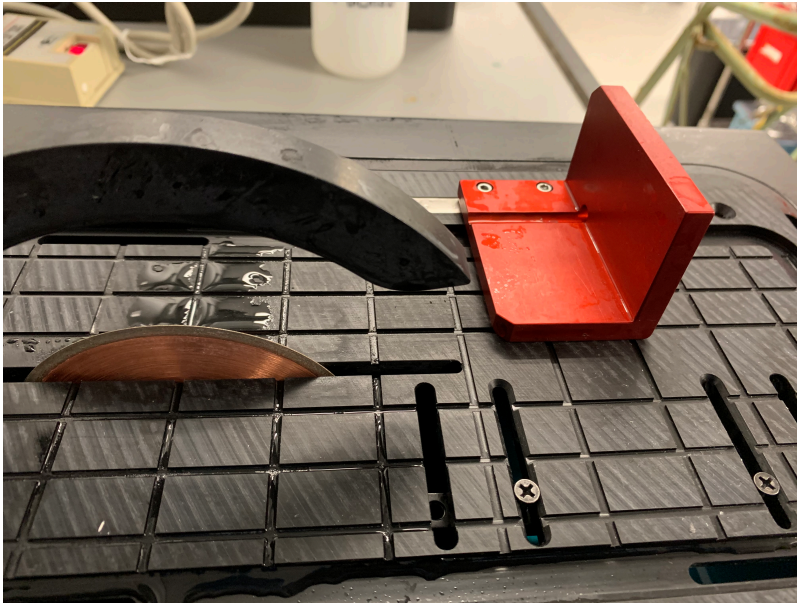

- Multipurpose fixture

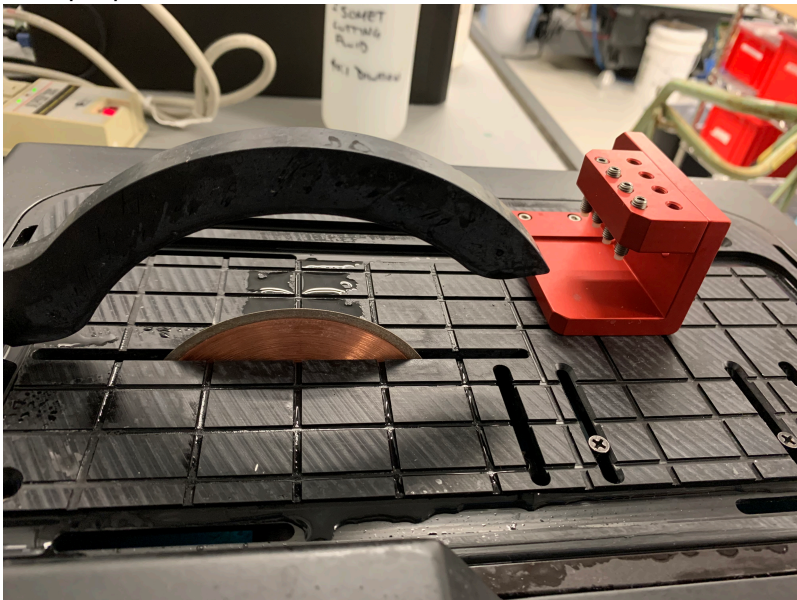

- Custom fixturing
- Fence

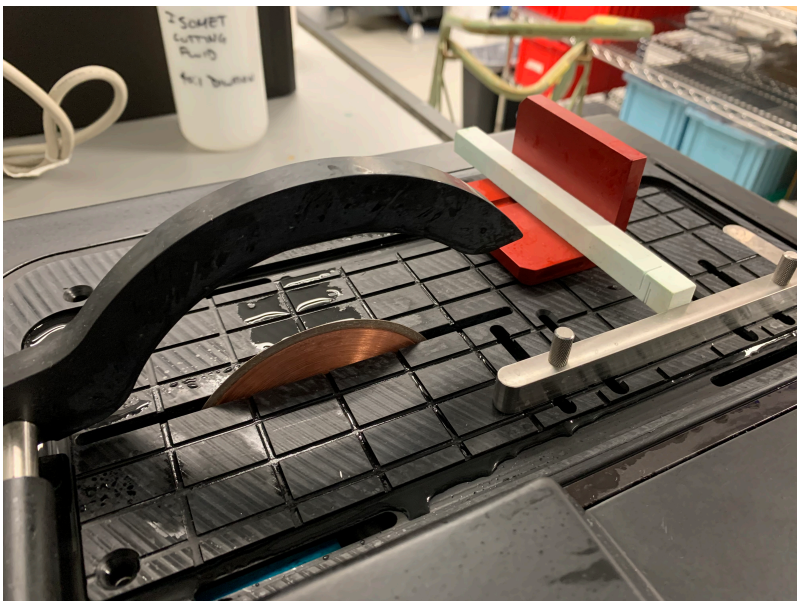

## Using the TrimSaw 2:

- Check the blade installed, coolant levels and part material
- Select an appropriate fixturing jig to insure part remains securely held and square to the saw blade
- Adjust the blade splash guard so that it just clears the fixture and workpiece but catches as much coolant as possible
- Replace the plexiglass cover
- Turn on the TrimSaw using the power switch by the power cord, then using the arrow buttons select the appropriate speed
- Slowly and gently feed the workpiece into the blade, allow the blade to cut without force feeding
- When cut is complete withdraw the fixture and workpiece from the cut (do NOT attempt to clear workpiece while saw is in motion).
- Using paper towels wipe the Trimsaw down and clear any dust particulates from cutting

### Post Processing:

- TrimSaw can leave small burrs on metal or composite components, sanding lightly with a high grit sandpaper can remove sharp edges

## Maintenance

- Blade Cleaning
  - Cutting blade can become loaded with material despite coolant
  - Using the Miter guide, load the silicon carbide dressing stick onto the saw and feed slowly into the spinning blade about two to three mm.



- Lubing threads
  - Due to material choices, the aluminum blade retaining nut is prone to cold welding to the stainless steel blade arbor. This is known as “thread galling” and makes removing the nut difficult and can damage the arbor and the nut
  - To prevent thread galling a small amount of grease must be applied to the arbor prior to threading on the retaining nut
- Emptying coolant

- When not in use for long periods, the coolant within the TrimSaw has a tendency to evaporate leaving behind a incredibly discussing green goop
- To prevent staff from having to clean this, if the TrimSaw is not in use for over a month it is advisable to drain the coolant tank
- Draining coolant can be done with the ball valve on the rear of the saw and should be emptied into a container for safe waste disposal.
- Rinse coolant tank twice with water after coolant has been emptied. Water can be disposed of directly into the sink
- Leave Trimsaw open to allow complete evaporation of any remaining water
- Filling coolant
  - Fill the TrimSaw coolant tank with DI water to the max fill line (about a gallon)
  - Add 120 mL of Coolmist coolant concentrate to DI water and mix

---

## TrimSaw 2 Quick Review

Tool Lead:

Contact: [andrewfurst@ucsb.edu](mailto:andrewfurst@ucsb.edu)

## Safety Concern

## Safe Operation Procedures Review

## Post Processing

From:

<https://bpm-wiki.cnsi.ucsb.edu/> - NSF BioPACIFIC MIP Wiki

Permanent link:

<https://bpm-wiki.cnsi.ucsb.edu/doku.php?id=trimsaw2sop&rev=1604343076>

Last update: **2020/11/02 18:51**

